




PIPE PENETRATION



STEP 1


Install **rollon™** liner piece over hole (9" min. past quick flash flange @ all sides). Leave bottom of liner loose to allow primary **rollon™** to be inserted underneath.

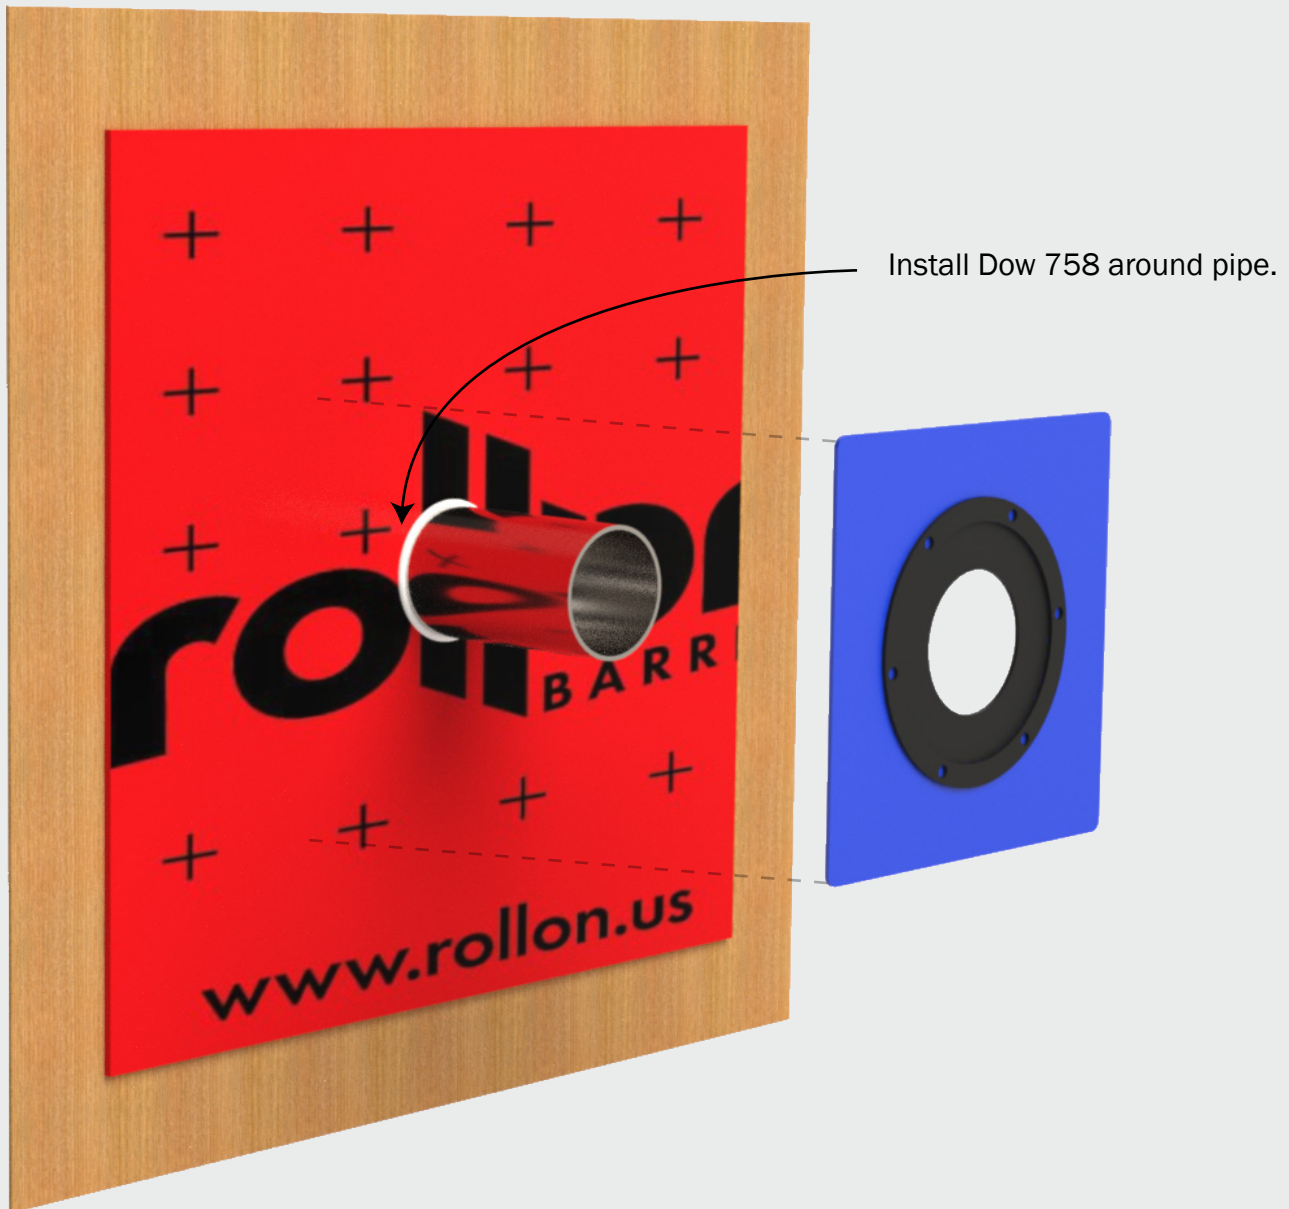

STEP 2

Install **Sealion™ tape** over quick-flash device starting with bottom, then sides.

Install **Sealion™ tape** over top of vent flange (rod & Dow 758 between blocking and siding).

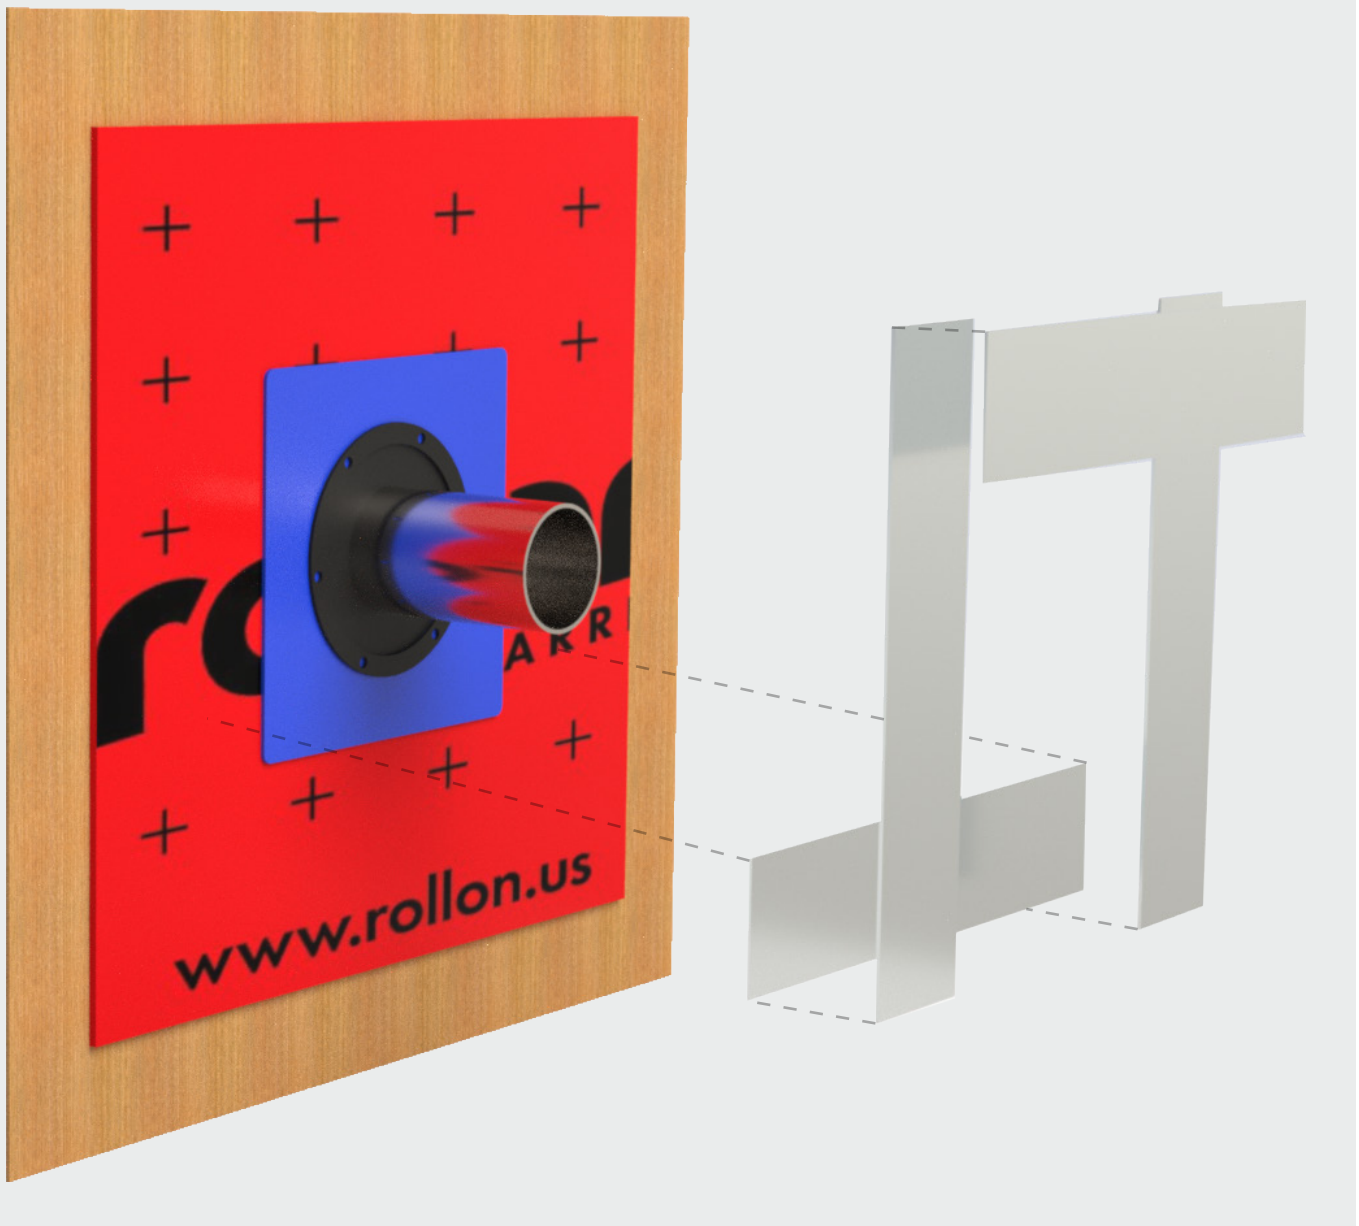

STEP 3

Install primary **rollon™** to structure, tucking under **rollon™** sill liner.

Continue installing primary **rollon™** by lapping over vent area & trimming around vent.

Ensure 2" min. overlap onto **rollon™ liner** – above, below & sides. Maintain 6" min. horizontal and vertical laps, typical.



STEP 4

