


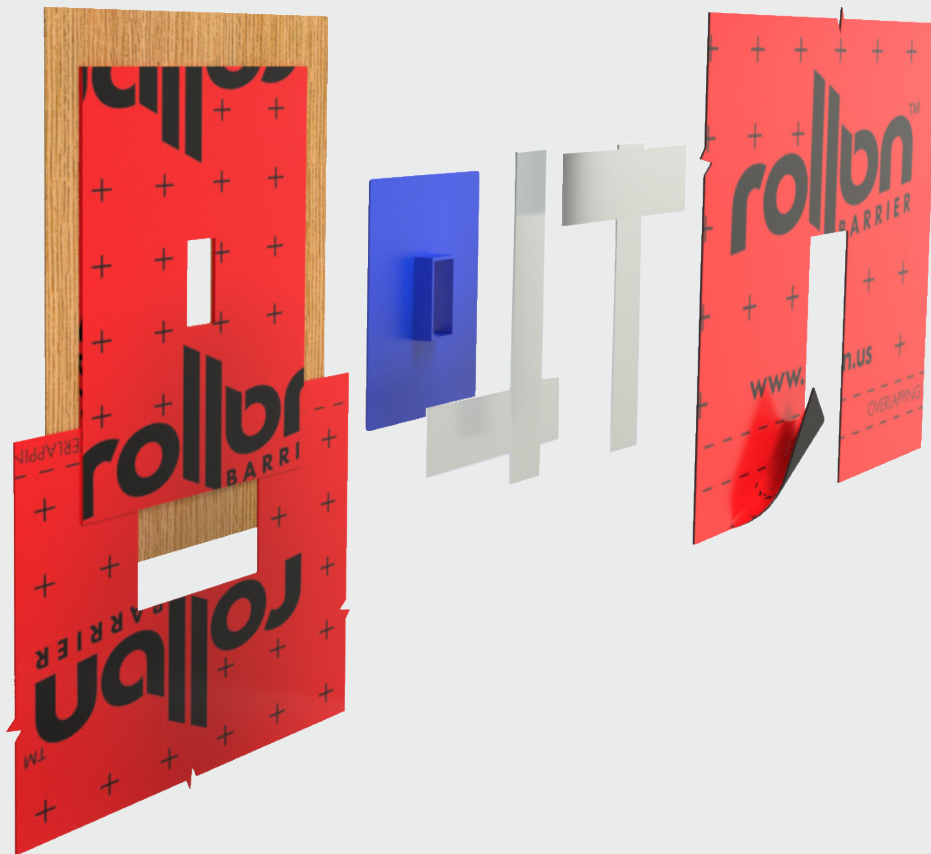


ELECTRICAL OUTLET BOX




STEP 1

Install **rollon™** liner piece over hole (9" min. past quick flash flange @ all sides). Leave bottom of liner loose to allow primary **rollon™** to be inserted underneath.

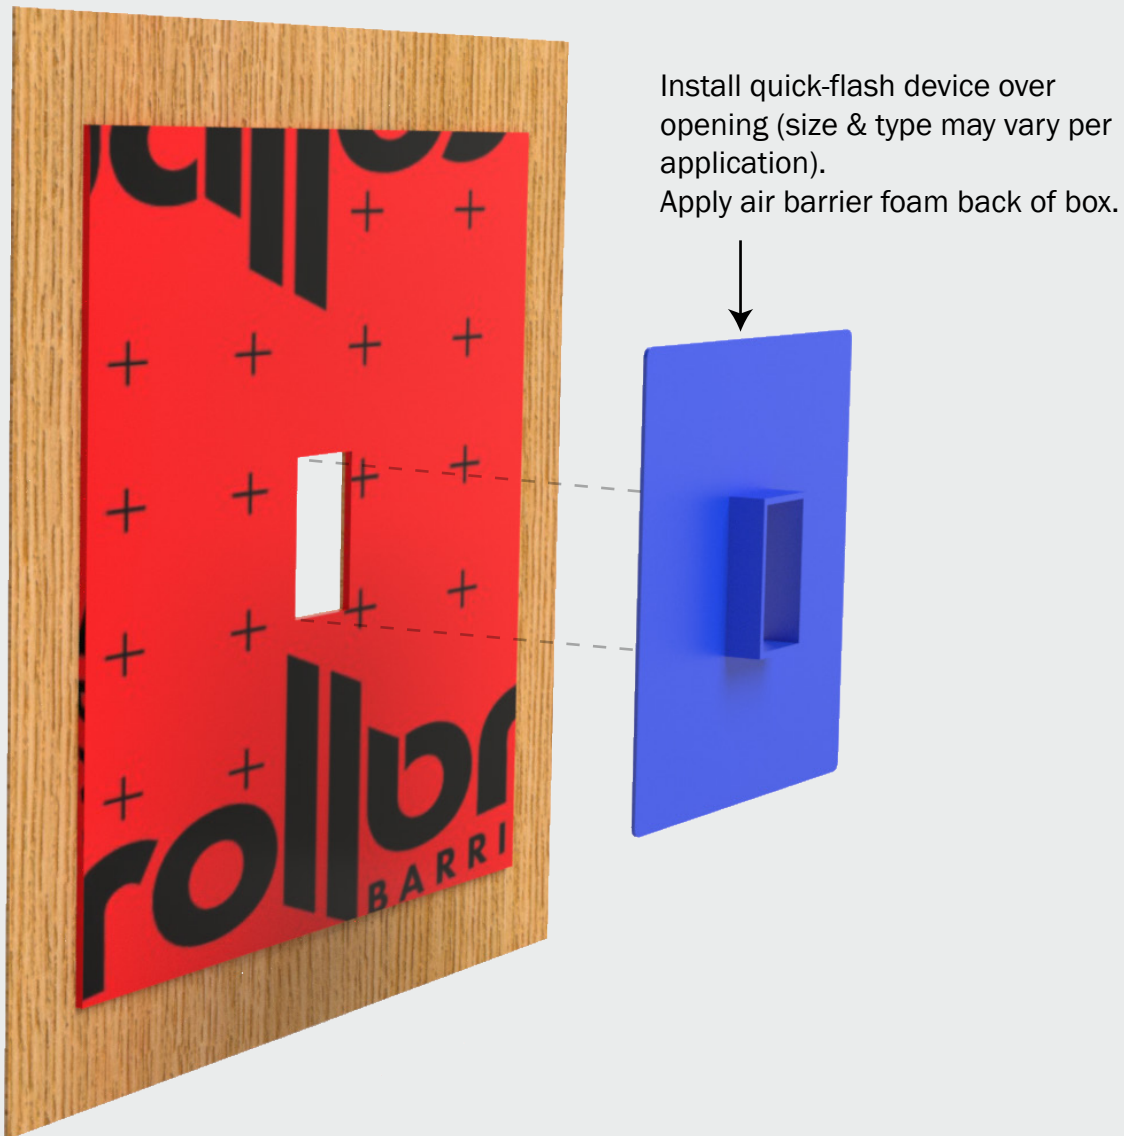


STEP 2

Install **Sealion™** tape over top of vent flange.

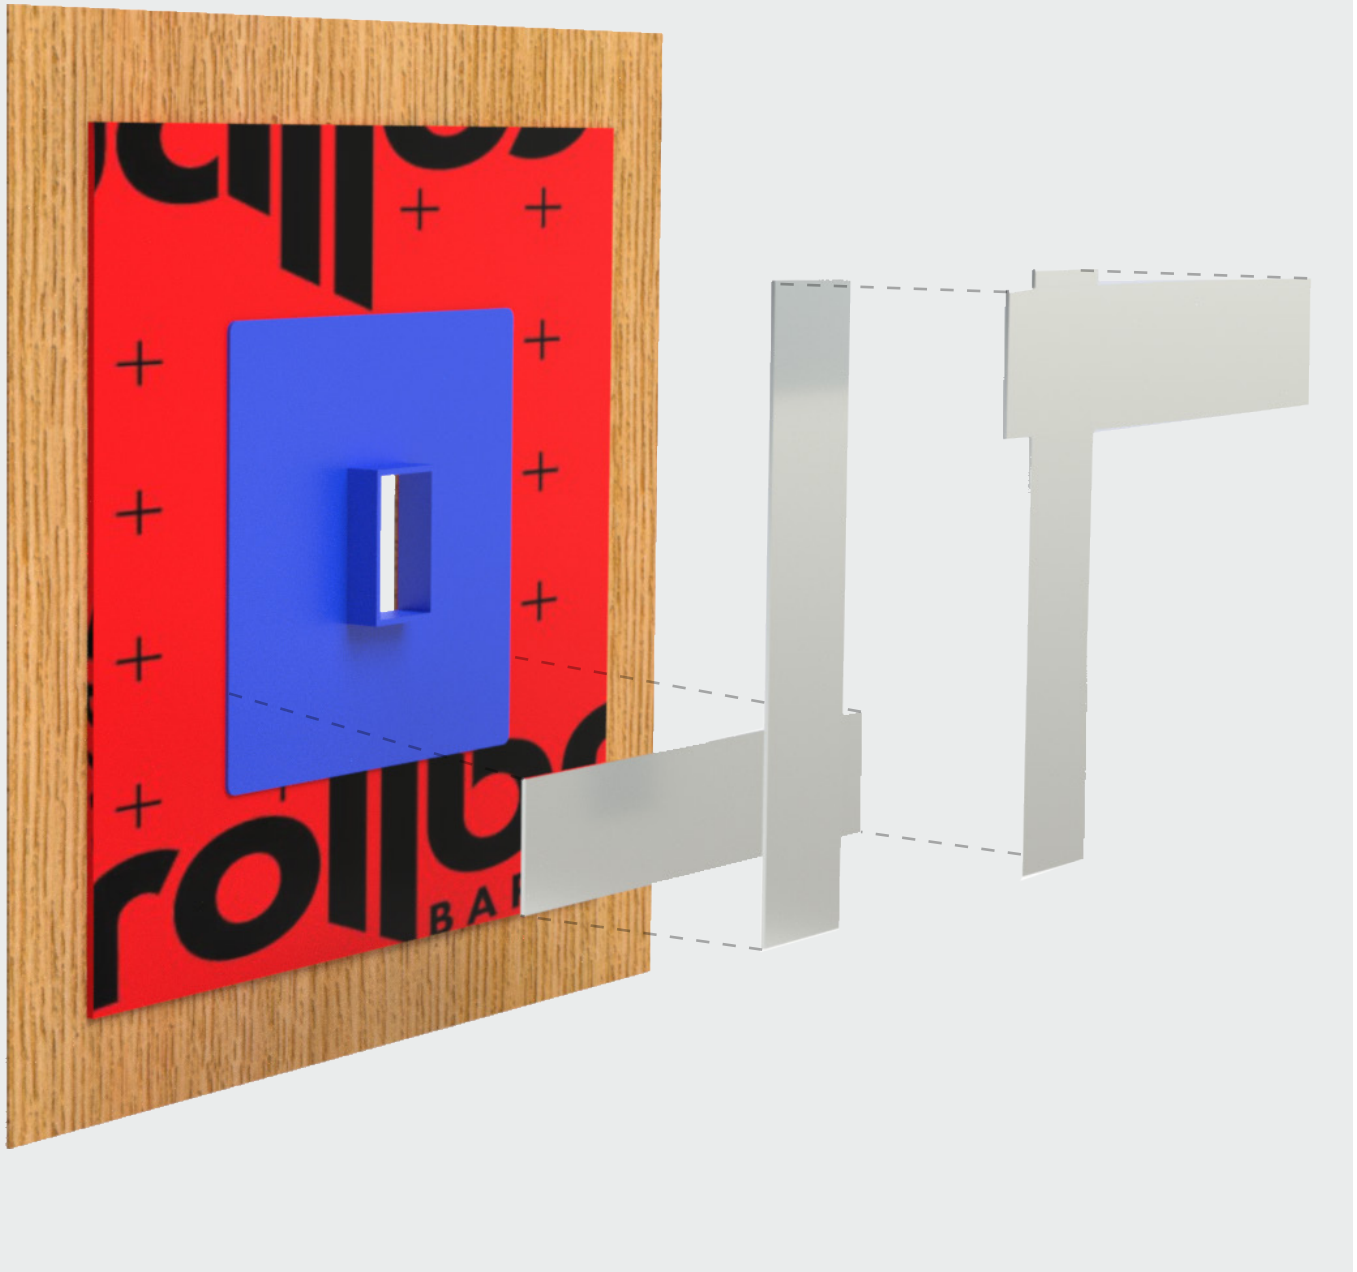

STEP 3

Continue installing primary **rollon™** by lapping over vent area & trimming around vent. (Maintain 6" min. horizontal and vertical laps, typical).

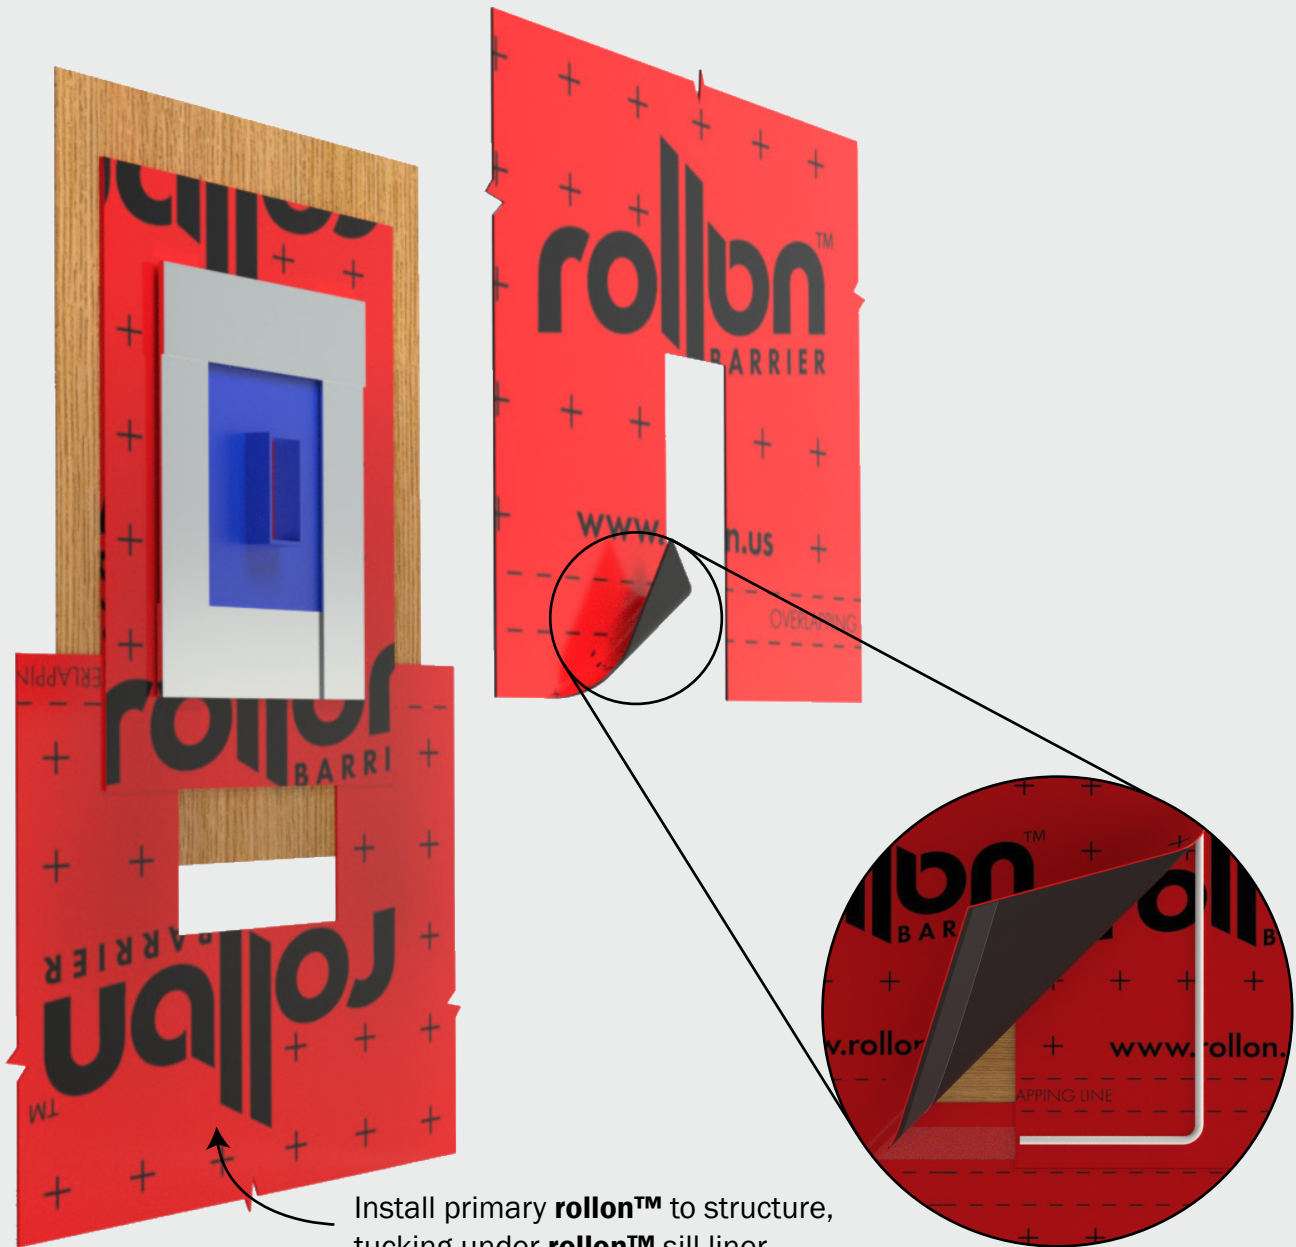

Install primary **rollon™** to structure, tucking under **rollon™** sill liner.