




THROUGH WALL KNIFE PLATE




STEP 1

Apply **rollon**TM liner leaving bottom loose to allow primary **rollon**TM to be inserted underneath.

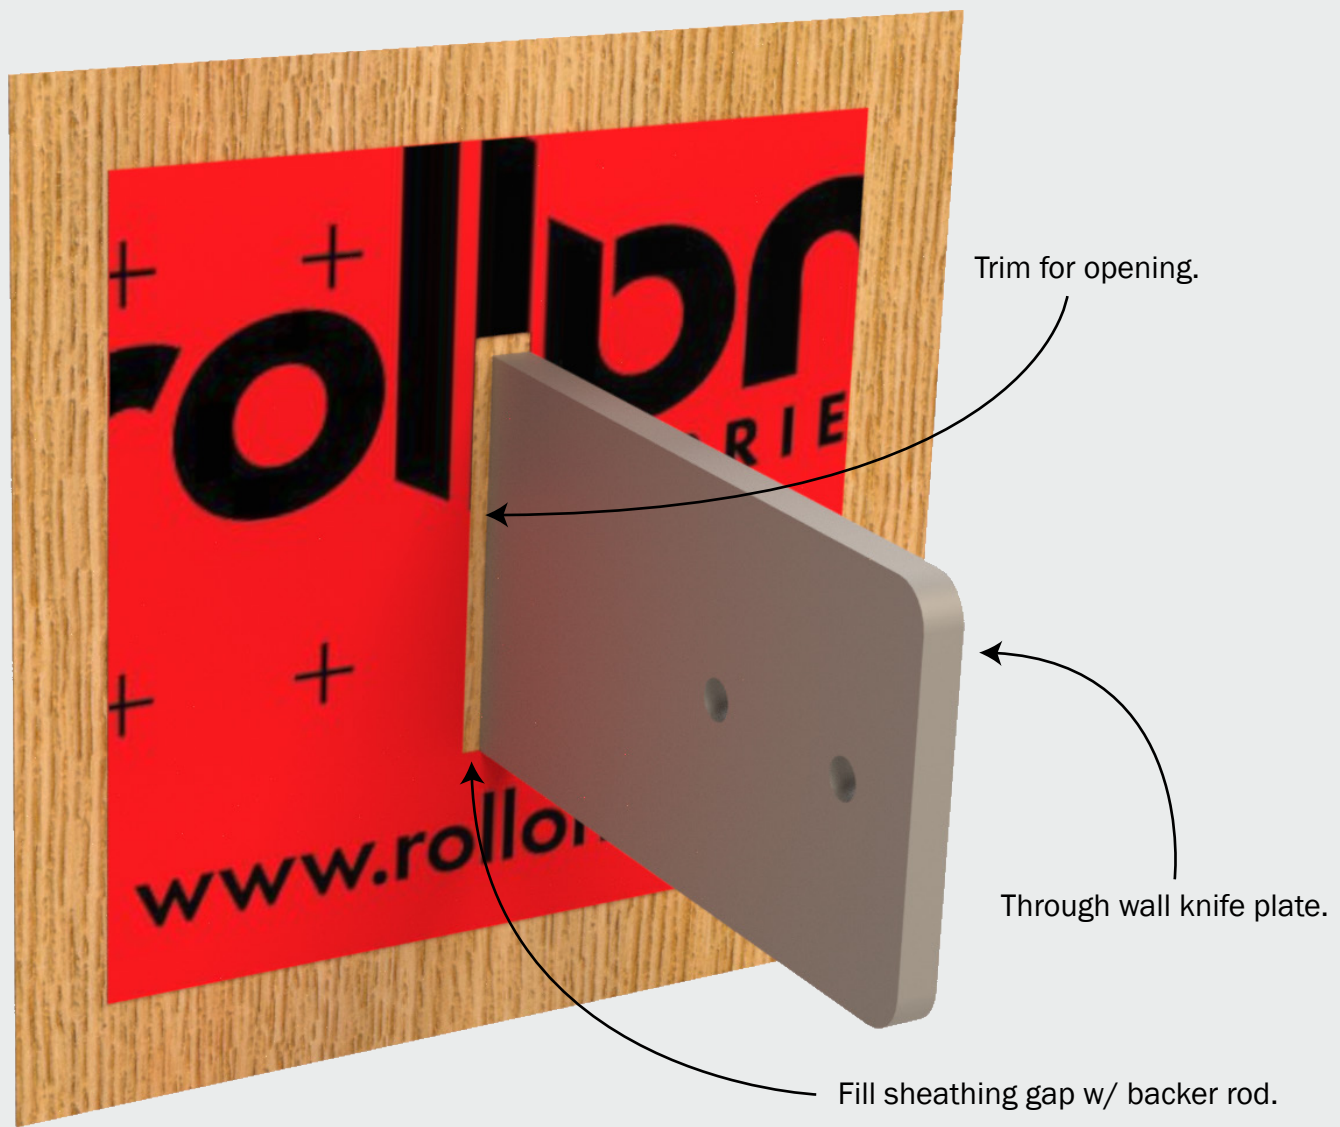

STEP 2

Apply liquid applied flashing over liner and continued onto knife attachment. (Rod & Dow 758 where siding is penetrated)

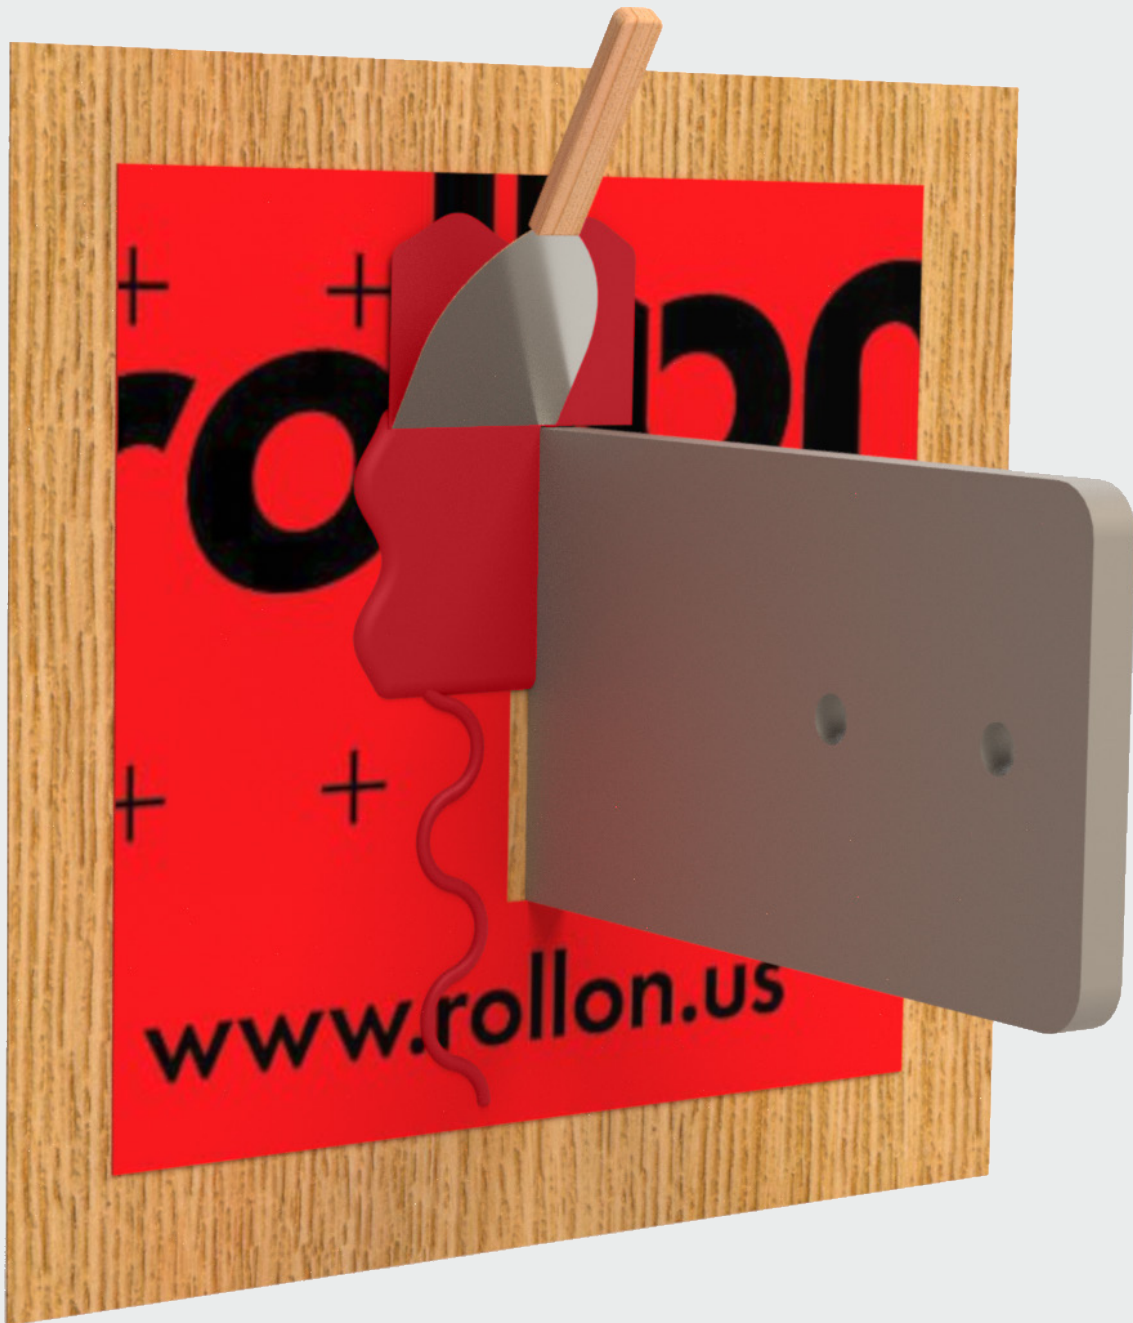

STEP 3



STEP 4

Apply primary **rollon™** to structure, tucking under **rollon™ liner**. Remove release paper and ensure full adhesion of **rollon™ liner** to primary **rollon™** for air barrier.

Shingle in primary **rollon™** with liner, maintain 6" min. horizontal and vertical laps. Terminate **rollon™** with Dow 758 to maintain air barrier, typical.

